

【切換頻率】 切換頻率



1. 功能表 → 按 ●



2. 設定 → 按 ●



3. 更多內容 → 按 ●



4. 行動網路 → 按 ●



5. 選擇 SIM1/SIM2

6. 偏好的網路類型
→ 按 ●

7. 自行選擇